


# ASSEMBLY INSTRUCTIONS MODEL : MH 52088

**IMPORTANT NOTE:**


- \* PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- \* BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- \* DO NOT TIGHTEN ALL SCREWS UNTIL THE PRODUCT IS FULLY SET-UP.

HARDWARE LIST			
NO	DESCRIPTION		QTY
A		JCBC BOLT M6 X 50mm	8
B		ALLEN KEY M4	1
C		WOOD DOWEL M8 X 30mm	10
D		CSK SCREW M4 X 32mm	4
E		BARREL NUT M6 X 13mm	8

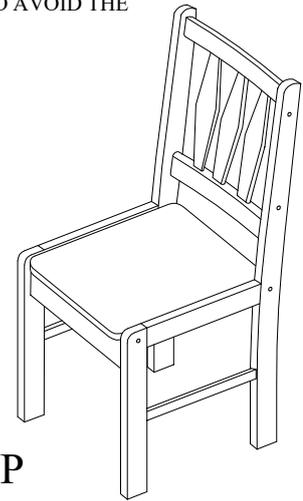


FULLY SET-UP


**STEP 1**

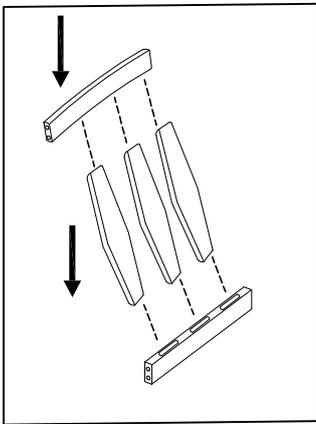

**STEP 3**

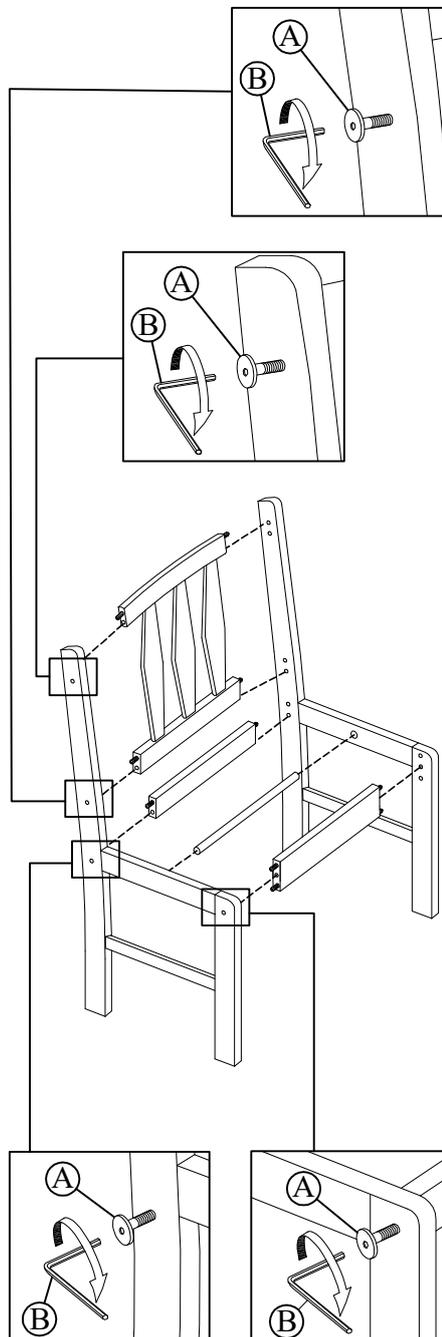

**STEP 4**

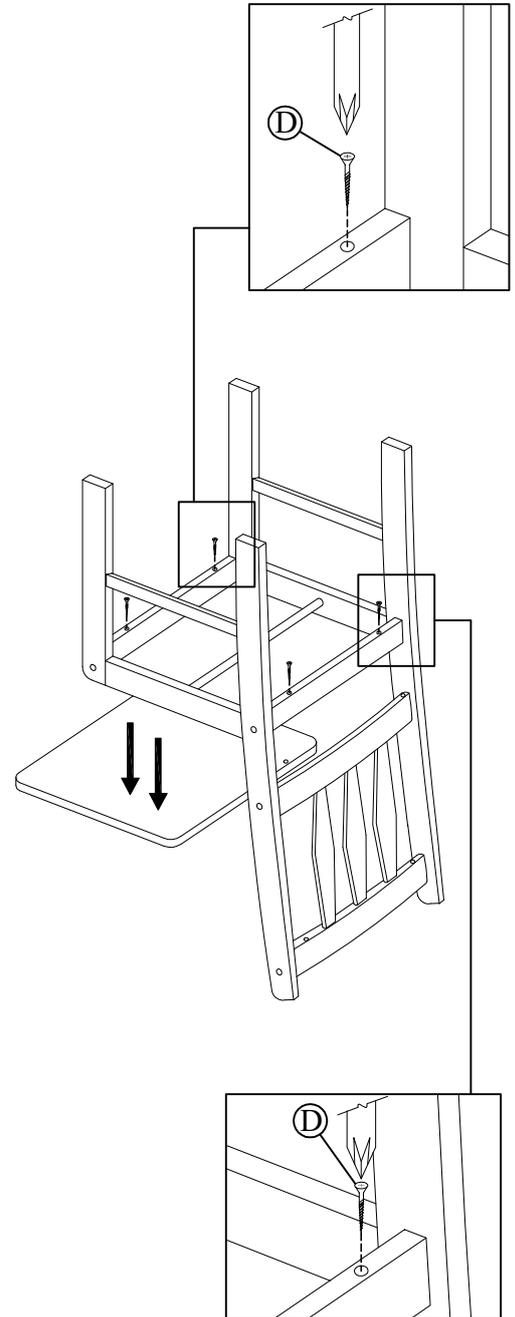

**STEP 2**

