


ASSEMBLY INSTRUCTIONS MODEL : MH 750(1100X700)

IMPORTANT NOTE:

- * PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- * BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- * DO NOT TIGHTEN ALL SCREWS UNTIL THE PRODUCT IS FULLY SET-UP.

HARDWARE LIST			
NO	DESCRIPTION		QTY
A		JCBC BOLT M6 X 50mm	8
B		SPRING WASHER M6	8
C		FLAT WASHER M6	8
D		ALLEN KEY M4	1

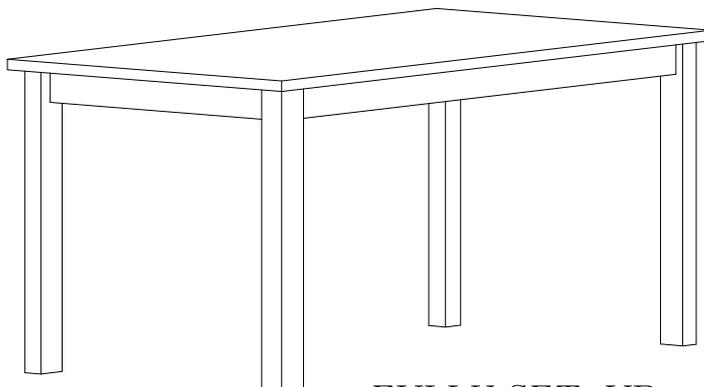

FULLY SET-UP

STEP 1

