


# ASSEMBLY INSTRUCTIONS MODEL : MH 52035

**IMPORTANT NOTE:**

- \* PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- \* BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- \* DO NOT TIGHTEN ALL SCREWS UNTIL THE PRODUCT IS FULLY SET-UP,


**HARDWARE LIST**

NO	DESCRIPTION	QTY
A	 JCBC BOLT M6 X 50mm	8
B	 BARREL NUT M6 X 13mm	8
C	 JCBC BOLT M6 X 25mm	4
D	 WOOD DOWEL M8 X 30mm	4
E	 CSK SCREW M4 X 32mm	4
F	 ALLEN KEY M4	1

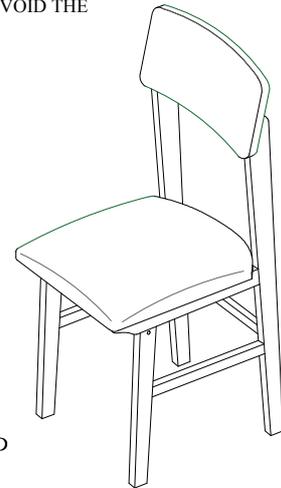


FULLY SET-UP


**STEP 1**

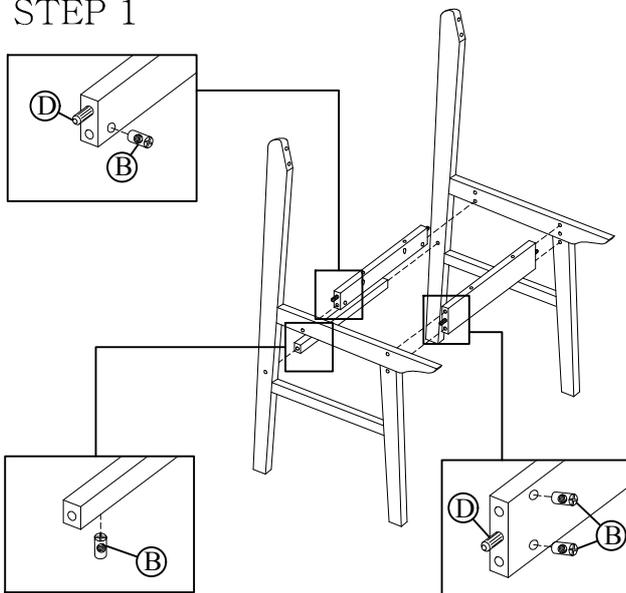

**STEP 2**

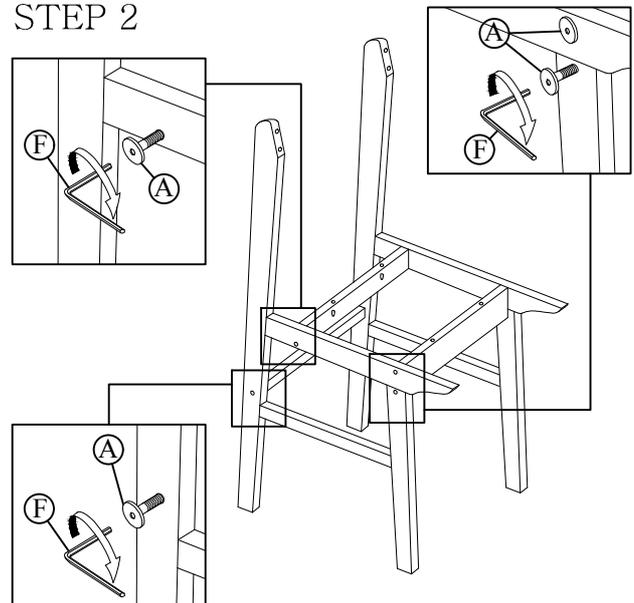

**STEP 3**

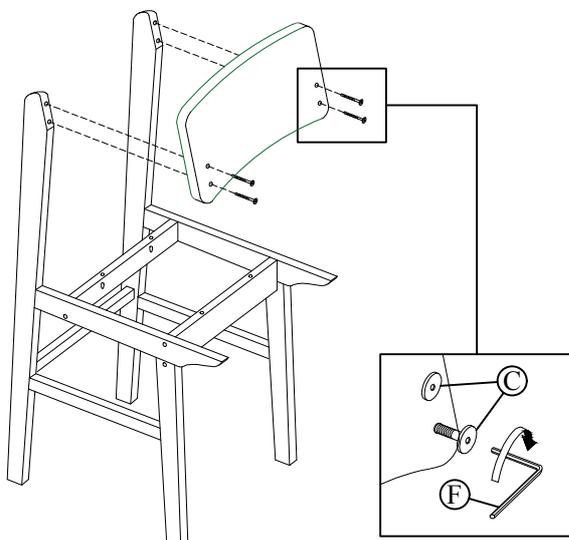

**STEP 4**

